



**MYE Entertainment
MYE PERSONAL DIGITAL TV SYSTEM
M156TV-PDM4**

Owners Manual

CONTENTS

	page(s)	page(s)
GENERAL SAFETY and CARE	3 - 5	
Important Safety Instructions.....	4	
In the Box.....	5	
Mounting the Screen.....	5	
Key Pad Orientation	6	
Key Pad Orientation.....	6	
MAIN MENU ACCESS	7	
Main MENU – Access.....	7	
1 CHANNEL SETUP	7 - 9	
1 - 1 Auto Tuning.....	7	1 - 2 DTV Manual Tuning..... 8
1 - 3 ATV Manual Tuning.....	8	1 - 4 Programme Edit..... 9
2 PICTURE SETUP	10 - 11	
2 - 1 Picture Mode.....	10	2 - 2 Color Temperature..... 10
2 - 3 Aspect Ratio.....	11	2 - 4 Noise Reduction..... 11
3 SOUND SETUP	12 - 13	
3 - 1 Sound Mode.....	12	3 - 2 Balance..... 12
3 - 3 Auto Volume.....	13	3 - 4 Surround Sound..... 13
3 - 5 AD Switch.....	13	
4 TIME SETUP	14 - 15	
4 - 1 Clock.....	14	4 - 2 Sleep Time..... 14
4 - 3 Auto Sleep.....	15	4 - 4 Time Zone..... 15
5 OPTION SETUP	15 - 17	
5 - 1 OSD Language.....	15	5 - 2 Audio Languages..... 16
5 - 3 Subtitle Language.....	16	5 - 4 Hearing Impaired..... 17
6 CUSTOM FEATURES SETTING	17 - 18	
6 - 1 Detect Vibration.....	17	6 - 2 Channel Default Time..... 17
6 - 3 Channel Default.....	18	6 - 4 Auto Default..... 18
6 - 5 Auto Power On.....	18	6 - 6 Manual Channel Setting..... 18
6 - 7 Restore Factory Default.....		
7 Intellijack - Headphone Jack Replacement		19
8		20
9 WARRANTY		21

GENERAL SAFETY and CARE

Thank you for your purchase of the MYE Entertainment personal viewing screen.

This product has been designed specifically for use in the health & fitness industry, ensuring maximum performance and longevity in the harsh fitness club environment. Properly cared for, this product will provide years of high-quality entertainment.



Prepare an area in which to place the product components as they are removed from the box prior to installation. The surface of the work area should be clean so as not to damage the screen and associated components.



Do not open package using sharp instruments or tool.



Inspect all shipping carton for signs of damage and to ensure that the contents of the carton have not broken loose during shipping.

Important Safety Instructions

Before you begin, read all warnings.



CAUTION! RISK OF ELECTRICAL SHOCK

 
Do not attempt to disassemble, open or otherwise service the product. There are no user-serviceable parts inside.



Do not expose unit to liquid, rain, excessive moisture or areas of high humidity.



Do not use bent, damaged or modified power cords. Discontinue use and contact your technician.



Do not spray cleaner directly onto monitor. Clean only with a dry, soft cloth.




- ⚠ Only use the power adapter ***supplied with this product!*** Use of non-approved power adapters may result in personal injury or damage to the product.
- ⚠ This product should be installed using a manufacturer-approved mounting method **ONLY**. Use of unapproved mounting brackets may damage the product and void the warranty.
- ⚠ Route all cables safely per mounting situation. Ensure that the cables are routed in a manner as to avoid being damaged by personnel or equipment.
- ⚠ Ensure the product has adequate ventilation so as not to overheat the product. Do not place anything on the product that may impede proper air circulation and thus damage the product.
- ⚠ Avoid extreme temperatures. Locate the equipment away from sources of heat, such as radiators and heat registers.

IN THE BOX ...



- 1) M156TV-PDM4 Personal Viewing Screen
- 2) Power Supply
- 3) AC Power Supply Cord
- 4) Manual

CONNECTION IDENTIFICATION

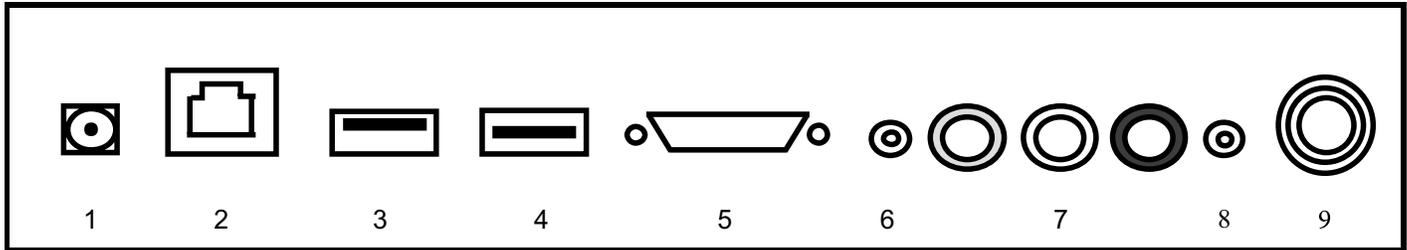


1	DC Power In. 2.5mm DC jack	6	AUX Audio Input. 3.5mm stereo jack (Option)
2	AUX TV Controller Cable port. RJ45 jack	7	AUX Audio/Video Input. RCA jacks (Option)
3	Firmware Download USB jack	8	AUX Audio Output. 3.5mm stereo jack
4	AUX HDMI Input Jack (Option)	9	RF Signal Input
5	AUX RGB In. HD-15 jack (Option)		

Mounting the Screen and Making the Connections
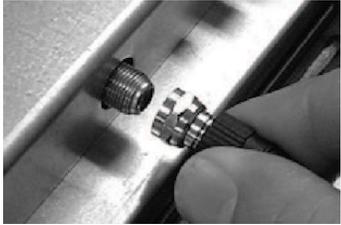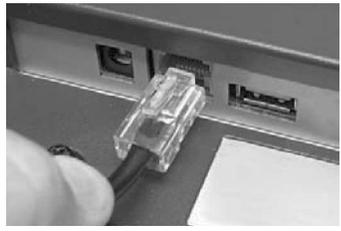
<p>Use the four screws (included) to fasten the screen to the mount. Using screws other than those supplied, may result in damage to the screen. It is <u>highly</u> recommended to <u>not</u> use a power tool when tightening these screws, as this may result in damage to the screen. Use a #2 Phillips screwdriver, taking care not to over-tighten!</p>	 <p>SCREEN MOUNTING SCREWS</p>
<p>Fasten the F-connector of the coaxial cable on to the fitting on the rear of the screen. It is important that care be taken with this connector, as over-tightening will result in serious damage to the screen. This connector should be started using only fingers and then tightened to 20 inch-pounds of torque, slightly more than finger-tight.</p>	
<p>For Strain Relief slide the DC power plug through the pre-installed wire tie and insert it into the DC jack on the TV. Pull the nylon tie snug around DC cable. This will also prevent the cable from becoming accidentally unplugged during use.</p>	
<p>When a secondary MYE Entertainment TV controller is installed, insert the controller cable's RJ45 plug into the jack on the back of the TV. Confirm that the plug's spring clip snaps into place and the plug is seated properly and securely in place.</p>	

Key Pad Orientation

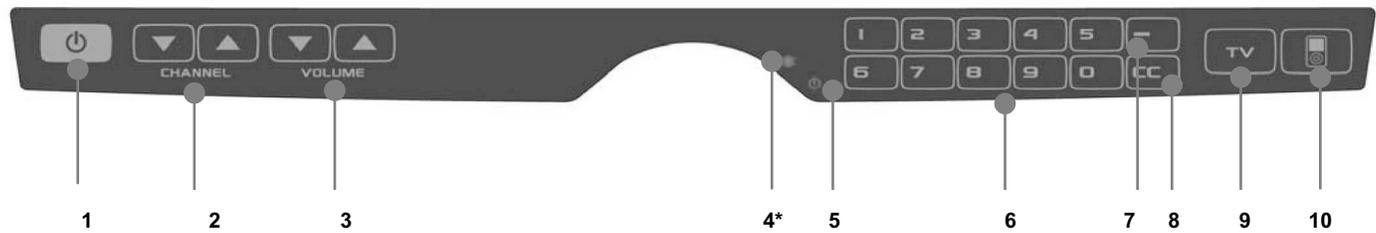

KEY PAD ORIENTATION

- 1 Power (On / Off)
- 2 Channel (Up / Down)
- 3 Volume (Up / Down)
- 4* Intellijack Faulty Headphone Jack Indicator* (Blue = Faulty Headphone Jack Detected)(See below)
- 5 TV Status (Green = TV On) (Red = TV Stand by)
- 6 Direct Channel Access (1-0)
- 7 Direct Digital Channel Access / MENU EXIT
- 8 Closed Caption / ENTER (Closed Caption / MUTE)
- 9 View TV
- 10 View Docking Station




Intellijack Icon

*The IntelliJack self diagnostic headphone circuit detects when the headphone jack has failed or been damaged. When a faulty headphone jack is detected, a BLUE "headphone" icon appears on the keypad (see #4 above). It will remain on until a new jack is installed and the circuit is reset. (See page 19). To reset the faulty headphone jack circuit, insert a known good pair of headphones for 5 seconds.

MAIN MENU ACCESS (No IR remote is required to access the TV MENU)

To access the MENU for SET UP and TV ADJUSTMENTS press "0002"

To navigate through the MENU use Channel Up / Down and Volume Up / Down and CC / --

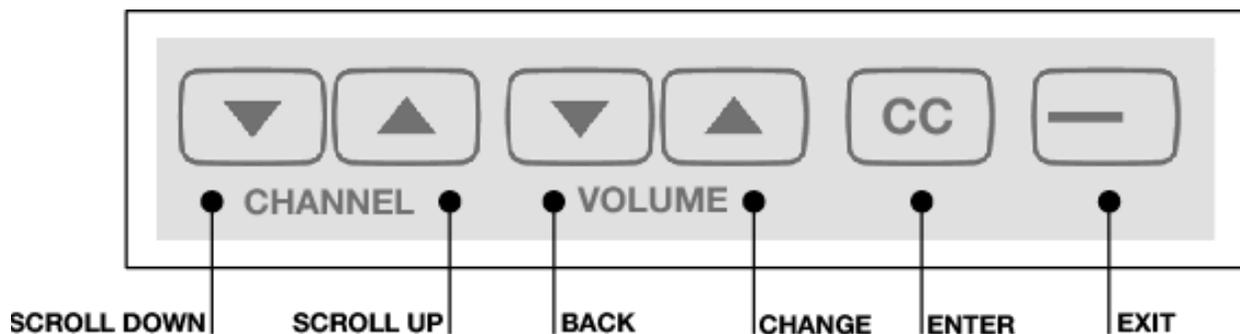


MAIN MENU ACCESS

To access the MENU for SETUP and TV ADJUSTMENTS press “CC 0002”

(No IR remote is required to access the TV MENU)

To navigate through the MENU use Channel Up / Down key and Volume

Up / Down key and CC / - key

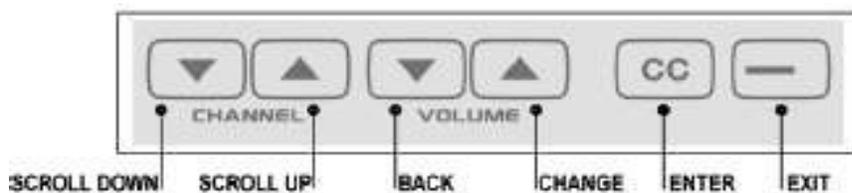

QUICK KEY CODES	
CC 0001	INSTANT CHANNEL PROGRAMMING FEATURE
CC 0002	MENU
CC 0003	CUSTOM FEATURES

To Enter MENU


- 1) Push 'CC 0002' on the keypad
- 2) Use Volume ▲ ▼ keys to select SUB-MENU
- 3) Press CC to enter SUB-MENU
(" - " (Dash) key to exit MENU , " 0 " key to Previous menu or skip)

1. CHANNEL SETUP

CHANNEL Contains 4 presets (Auto Tuning, DTV Manual Tuning, ATV Manual Tuning, Programme Edit)

(1) AUTO TUNING


1. Move to CHANNEL Menu
2. Use **CHANNEL ▲ ▼** keys to select “Auto Tuning”
3. Push “CC” to enter
4. Use **VOLUME ▲ ▼** keys to select
Tune Type (DTV+ATV /DTV /ATV)
5. Push **CHANNEL ▼** key
6. Use **CHANNEL ▲ ▼** keys and **VOLUME ▲ ▼**
keys to Select Country

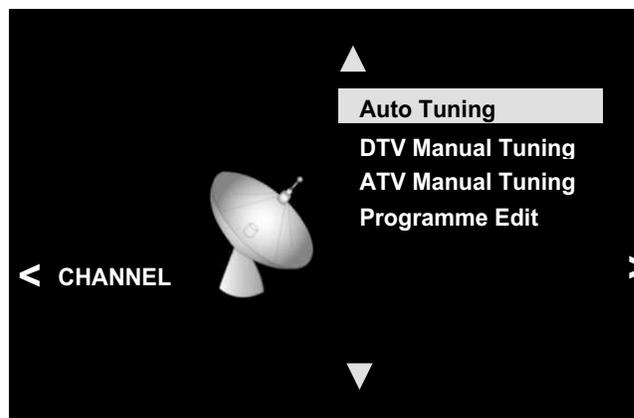

Tune Type	DTV+ATV	
Portugal	Serbia	Sweden
Rumania	Slovenia	Switzerland
Russian	Spain	UK
↶ MENU		




Tune Type	DTV+ATV	
Portugal	Serbia	Sweden
Rumania	Slovenia	Switzerland
Russian	Spain	UK
↶ MENU		

7. Push “**CC**” to begin AUTO TUNING
8. Press “**0**”key to SKIP or — (Dash) key to exit MENU

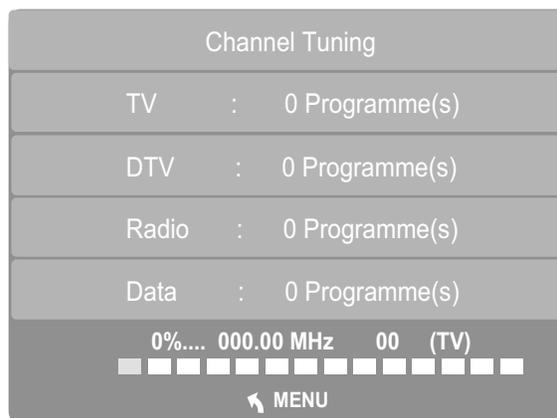


(2) DTV MANUAL TUNING

1. Move to CHANNEL menu
2. Use **CHANNEL ▲ ▼** keys to select “**DTV Manual Tuning**”
3. Push “**CC**” to enter
4. Use **VOLUME ▲ ▼** keys to select ‘CHANNEL Number’
(Check TV signal strength)
5. Push ‘**CC**’ to begin searching CH

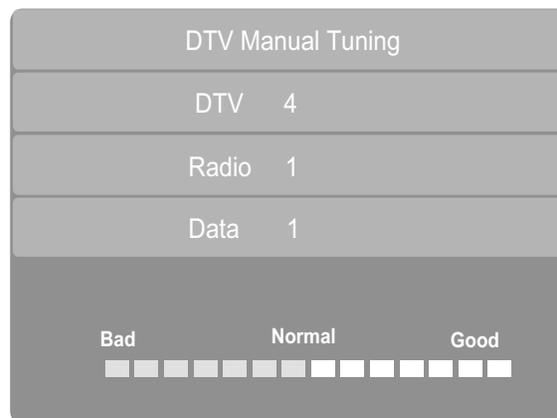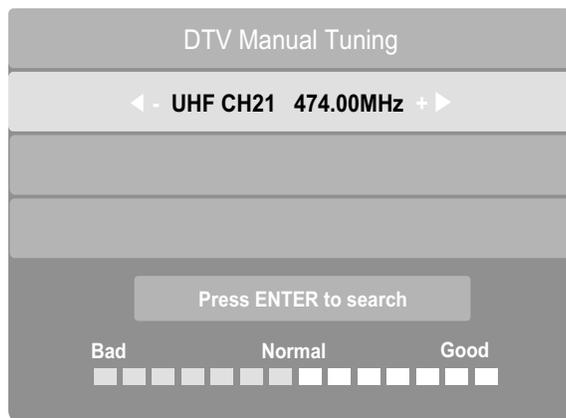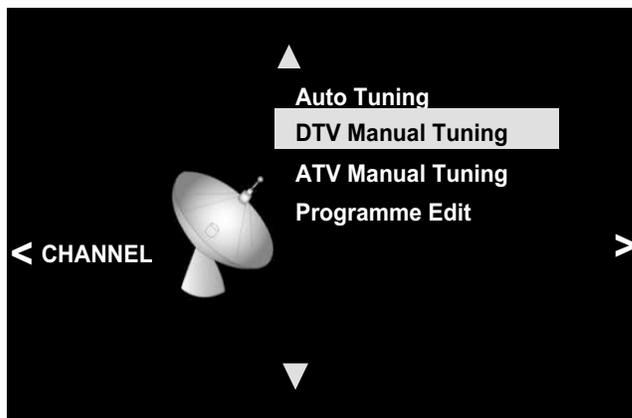

(3) ATV MANUAL TUNING



1. Move to **CHANNEL** menu
2. Use **CHANNEL ▲ ▼** keys to select “**ATV Manual Tuning**”
3. Push “**CC**” to enter
4. Use **CHANNEL ▲ ▼** keys to select “Storage”
Use **VOLUME ▲ ▼** keys to select storage number from 1 to 100
5. Use **CHANNEL ▲ ▼** keys to select “System”
Use **VOLUME ▲ ▼** keys to select System DK, L, BG, I

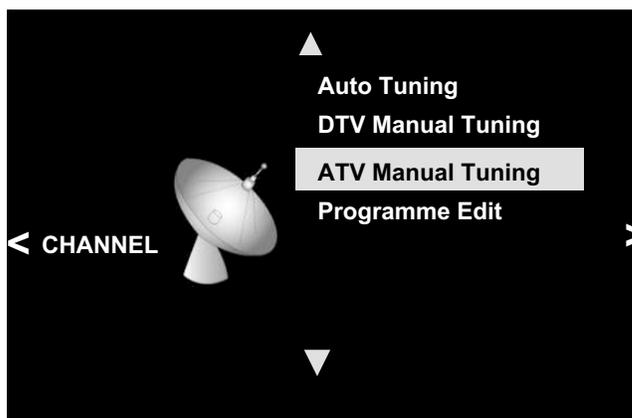

6. Use **CHANNEL ▲ ▼** keys to select “**Current CH**”
Use **VOLUME ▲ ▼** keys to select Current CH number from 1 to 100
7. Use **CHANNEL ▲ ▼** keys to select “**Search**”
Use **VOLUME ▲ ▼** keys to search CH Frequency
8. Use **CHANNEL ▲ ▼** keys to select “**Fine-Tune**”
Use **VOLUME ▲ ▼** keys to adjust Fine-Tune
9. Press the “**0**” key to set the channel store and get back to the CHANNEL MENU

(4) Programme Edit

1. Move to CHANNEL menu
2. Use **CHANNEL ▲ ▼** keys to select “**Programme Edit**”
3. Push “**CC**” to enter
4. CHANNEL DELETE
 - ① Use **CHANNEL ▼** key to select the CHANNEL to delete
 - ② Use **VOLUME ▼** key to delete the CHANNEL
5. CHANNEL MOVE
 - ① Use **CHANNEL ▼** key to select the CHANNEL to move
 - ② Use **CHANNEL ▲** key to select the CHANNEL and then move or adjust CHANNEL Place by using **CHANNEL ▼** key
6. CHANNEL NAME EDIT (Only ATV)
 - ① Use **CHANNEL ▼** key to select the CHANNEL to edit
 - ② Use **VOLUME ▲** key to select CHANNEL
 - ③ CHANNEL Name can be edited by using **VOLUME ▲ ▼** and **CHANNEL ▲ ▼** keys with alphabets and numbers

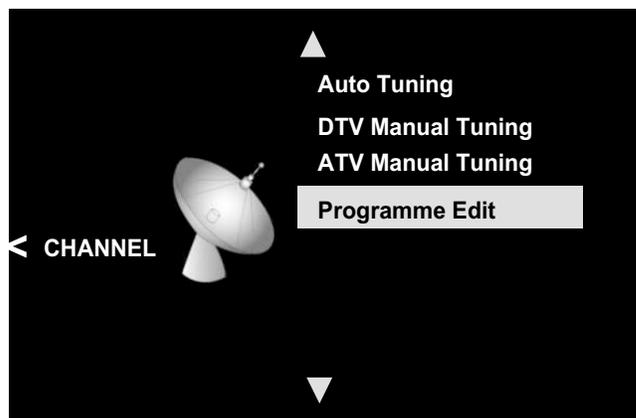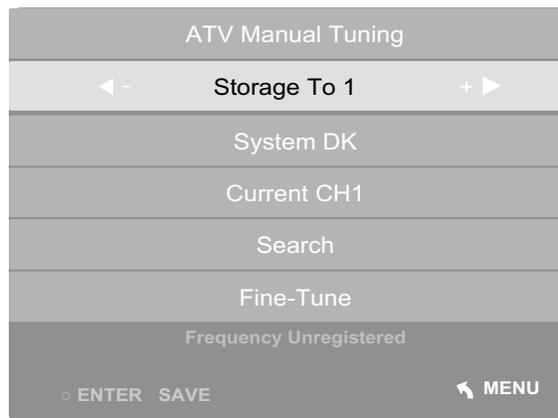

Manual Channel Setting		
1 BBC ONE	Viewable	DTV
2 BBC TWO	Viewable	DTV
3 BBC NEW 24	Viewable	DTV
4 BBC TEXT	Viewable	DTV
1 BBC PARLMNT	Viewable	Radio
1 C-02	Viewable	ATV
2 C-03 C-03	Viewable	
3 C-04	Viewable	ATV
▶ EDIT		
◦ ENTER		↶ MENU


Manual Channel Setting		
1 BBC ONE	Viewable	DTV
2 BBC TWO	Viewable	DTV
3 BBC NEW 24	Viewable	DTV
4 BBC TEXT	Viewable	DTV
1 BBC PARLMNT	Viewable	Radio
1 C-02	Viewable	ATV
2 C-03	Viewable	ATV
3 C-04	Viewable	ATV
◀ Delete		▶ MOVE
◦ ENTER		↶ MENU

2. PICTURE SETUP

PICTURE Contains 4 presets (Picture Mode, Color Temperature, Aspect Ratio, Noise Reduction)

(1) Picture Mode

1. Move to PICTURE menu
2. Use **CHANNEL ▲ ▼** keys to select "Picture Mode"
3. Push "**CC**" to enter
4. Use **VOLUME ▲ ▼** keys to select "Picture Mode Standard/ Mild/ User /Dynamic "
5. Contrast, Brightness and etc of User Mode can be adjusted by using **CHANNEL ▲ ▼** and **VOLUME ▲ ▼** keys

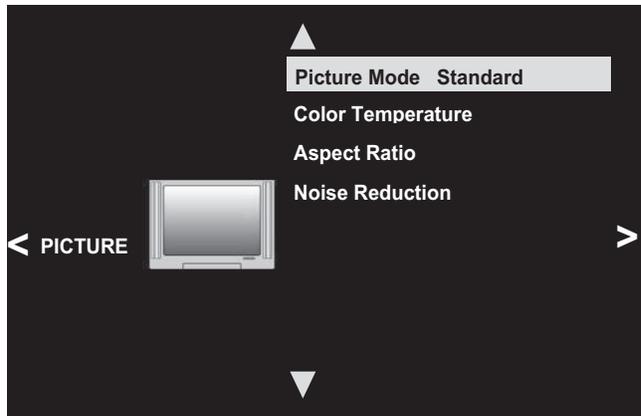


Picture Mode	Standard
Contrast	82
Brightness	50
Color	55
Sharpness	60
Tint	50
MENU	

Picture Mode	User
Contrast	85
Brightness	48
Color	48
Sharpness	60
Tint	50
MENU	

(2) Color Temperature

1. Move to PICTURE menu
2. Use **CHANNEL ▲ ▼** keys to select "Color Temperature"
3. Push "**CC**" to enter
4. Use **VOLUME ▲ ▼** keys to select "Color Temperature Medium, Warm, User, Cool "
5. Red, Green, Blue of User Mode can be adjusted by using **CHANNEL ▲ ▼** and **VOLUME ▲ ▼** keys

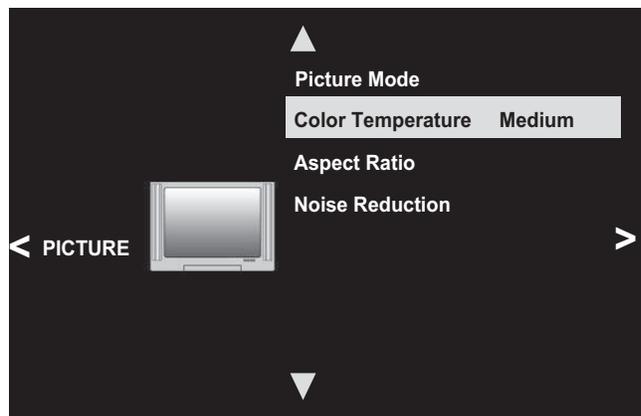


Color Temperature	Medium
Red	33
Green	10
Blue	28
MENU	

Color Temperature	User
Red	50
Green	10
Blue	28
MENU	



(3) Aspect Ratio

1. Move to PICTURE menu
2. Use **CHANNEL ▲ ▼** keys to select **"Aspect Ratio"**
3. Push **"CC"** to enter
4. Use **CHANNEL ▲ ▼** keys to select 4:3 or 16:9

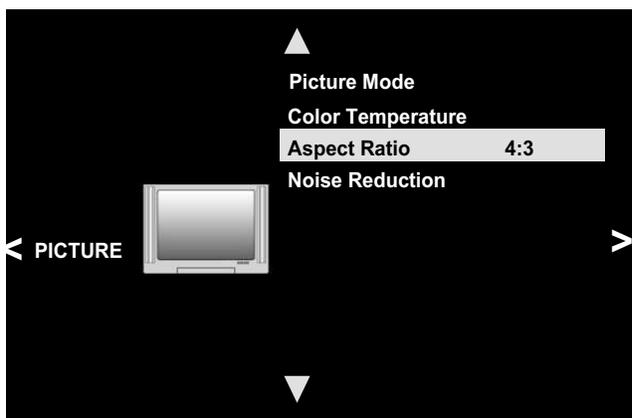

(4) Noise Reduction

1. Move to PICTURE menu
2. Use **CHANNEL ▲ ▼** keys to select **"Noise Reduction"**
3. Push **"CC"** to enter
4. Use **CHANNEL ▲ ▼** keys to select Off / Low / Middle / High


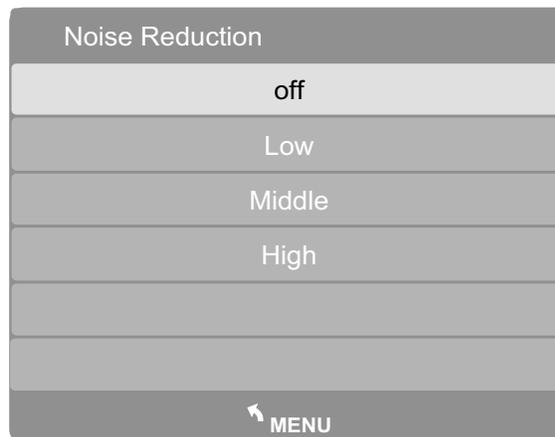
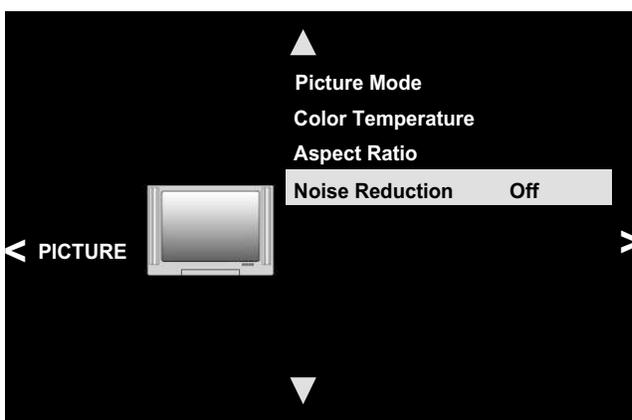


3. SOUND SETUP

SOUND Contains 5 presets (Sound Mode, Balance, Auto Volume, Surround Sound, AD Switch)



(1) Sound Mode

1. Move to SOUND menu
2. Use **CHANNEL ▲ ▼** keys to select "Sound Mode"
3. Push "CC" to enter
4. Use **VOLUME ▲ ▼** keys to select SOUND Standard, Music, movie,sport, User.
5. Treble and Bass of User Mode can be adjusted by using **CHANNEL ▲ ▼** and **VOLUME ▲ ▼** keys

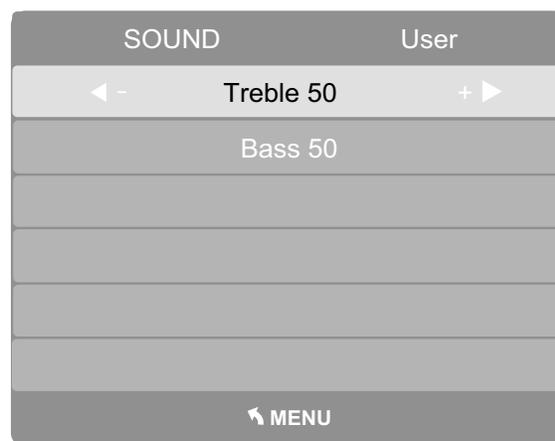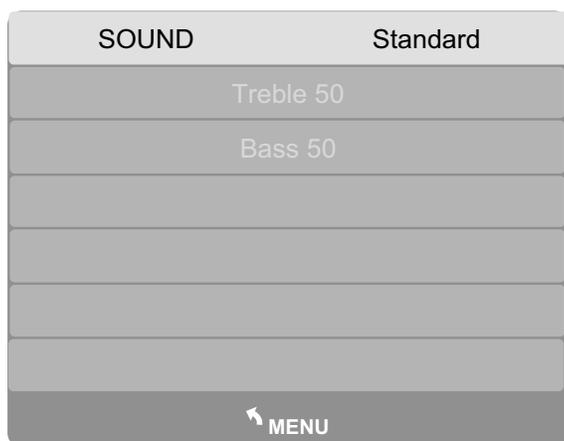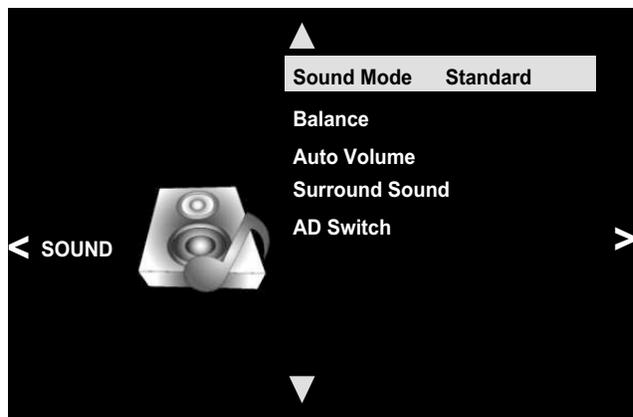


(2) Balance

1. Move to SOUND menu
2. Use **CHANNEL ▲ ▼** keys to select "Balance"
3. Push "CC" to enter
4. Use **VOLUME ▲ ▼** keys to adjust "Balance from -50 to +50"

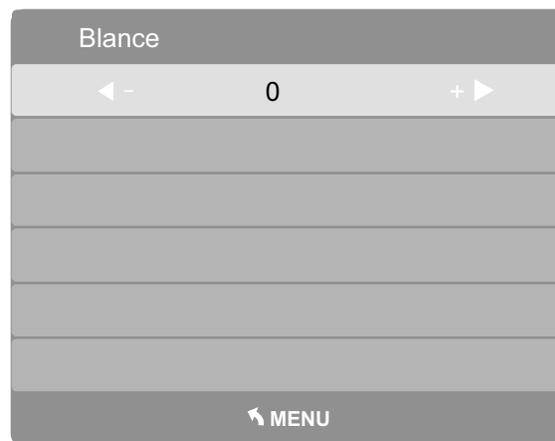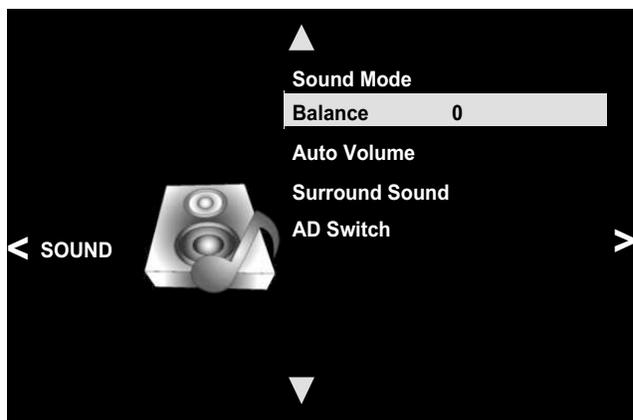



(3) Auto Volume

1. Move to SOUND menu
2. Use **CHANNEL ▲▼** keys to select "Surround Sound"
3. Use **CHANNEL ▲▼** keys to select Off, Surround, SRS TruSurround XT

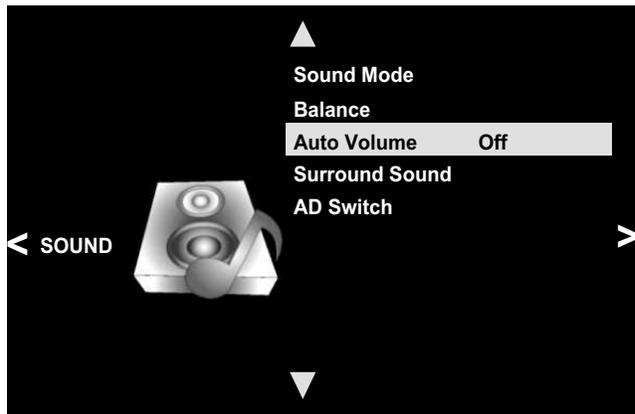




(4) Surround Sound

1. Move to SOUND menu
2. Use **CHANNEL ▲▼** keys to select "Surround Sound"
3. Use **CHANNEL ▲▼** keys to select Off, Surround, SRS TruSurround XT

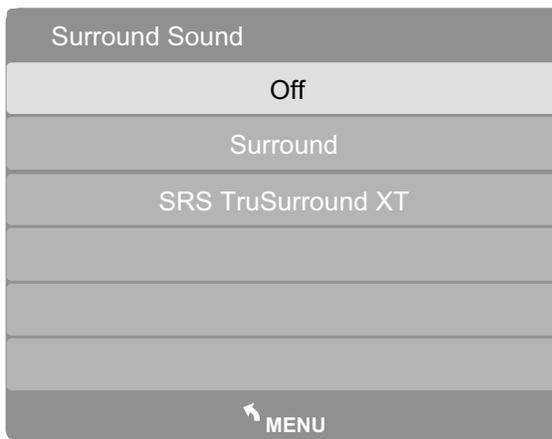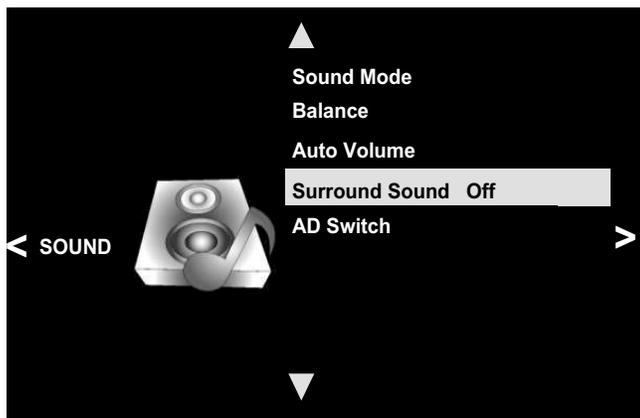

(5) AD Switch

1. Move to SOUND menu
2. Use **CHANNEL ▲▼** keys to select "AD Switch"
3. Push "CC" to enter
4. Use **VOLUME ▲▼** keys to select AD Switch ON/OFF
5. AD Volume of ON Mode can be adjusted by using **CHANNEL▲▼** and **VOLUME ▲▼** keys

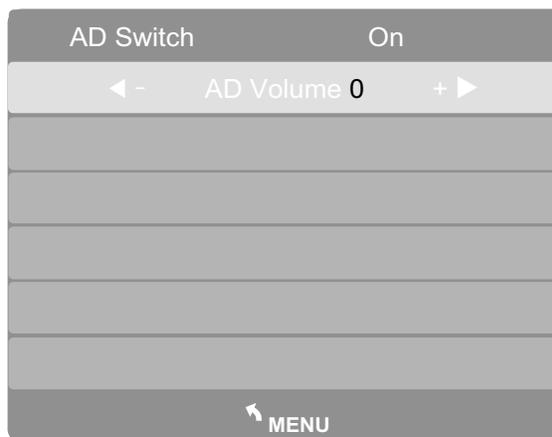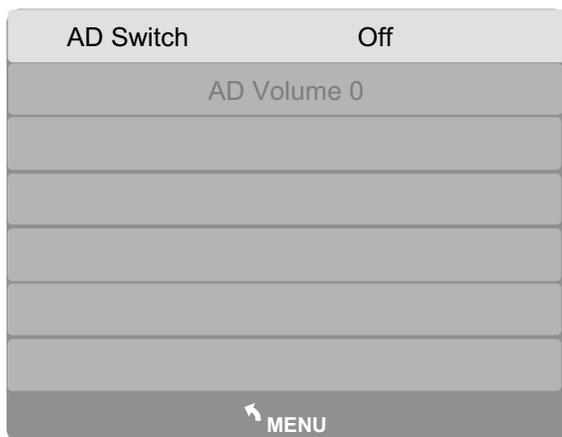
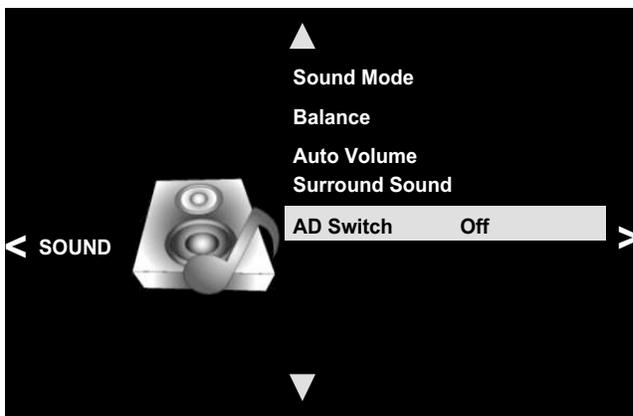


4. TIME SETUP

TIME Contains 4 presets (Clock, Sleep Timer, Auto Sleep, Time Zone)


(1) Clock

1. Move to TIME Menu
2. Use **CHANNEL ▲ ▼** keys to select **"Clock"**
3. Push **"CC"** to enter
4. Use **CHANNEL ▲ ▼** keys to select setting :
 - Date
 - Month
 - Year
 - Hour
 - Minute
5. Push **VOLUME ▲ ▼** keys to adjust

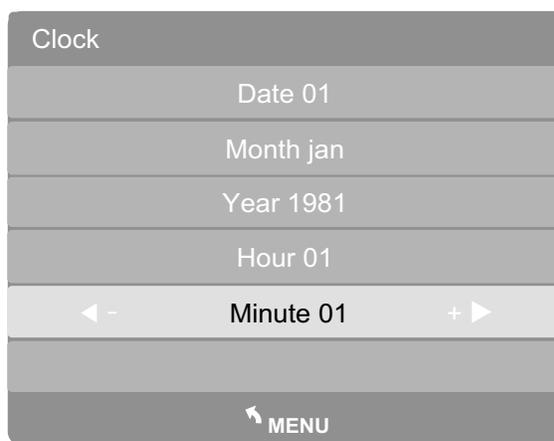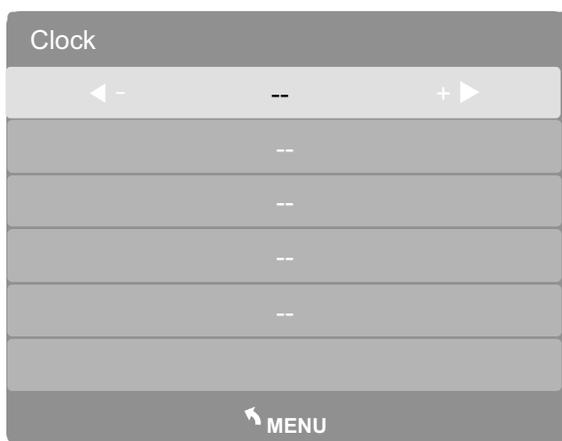


(2) Sleep Time

1. Move to TIME menu
2. Use **CHANNEL ▲ ▼** keys to select **"Sleep Time"**
3. Push **"CC"** key to enter
4. Use **CHANNEL ▲ ▼** keys to select : Off / 10min / 20min / 30min / 60min / 90min / 120min / 180min / 240min

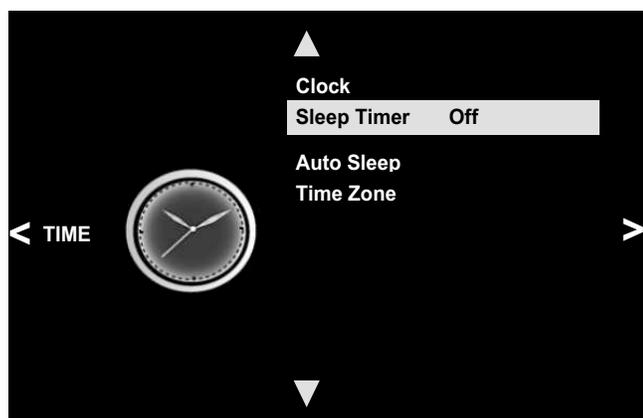


(3) Auto Sleep

1. Move to TIME menu
2. Use **CHANNEL ▲ ▼** keys to select “Auto Sleep”
3. Use “**CC**” key to on remote select ON/OFF

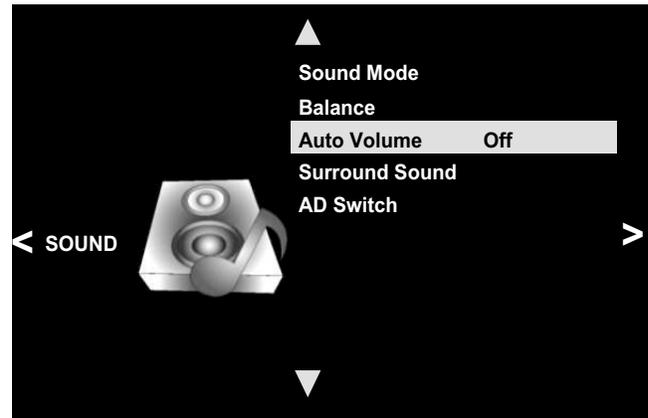

(4) Time Zone

1. Move to TIME menu
2. Use **CHANNEL ▲ ▼** keys to select “Time Zone”
3. Push “**CC**” key to enter
4. Use **CHANNEL ▲ ▼** and **VOLUME ▲ ▼** keys on remote to select Time Zone

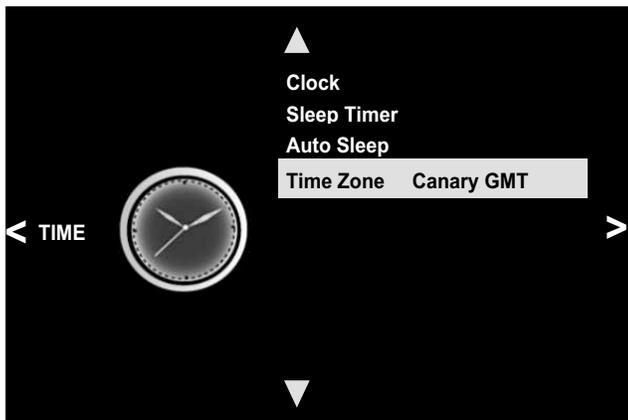



5. OPTION SETUP

OPTION Contains 4 presets

(OSD Language, Audio Language, Subtitle Language, Hearing impaired)


(1) OSD Language

1. Move to OPTION menu
2. Use **CHANNEL ▲ ▼** keys to select “OSD Language”
3. Push “**CC**” to enter
4. Use **CHANNEL ▲ ▼** and **VOLUME ▲ ▼** keys on remote to select language

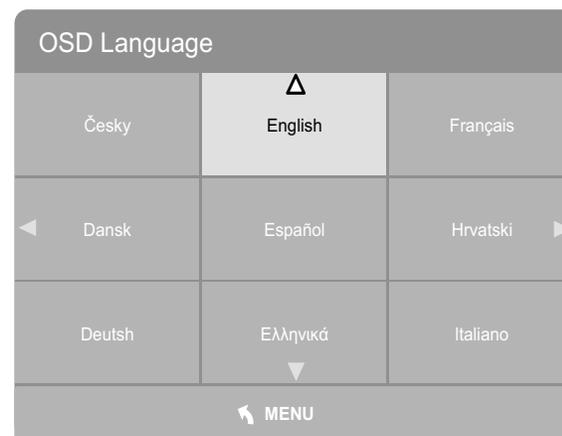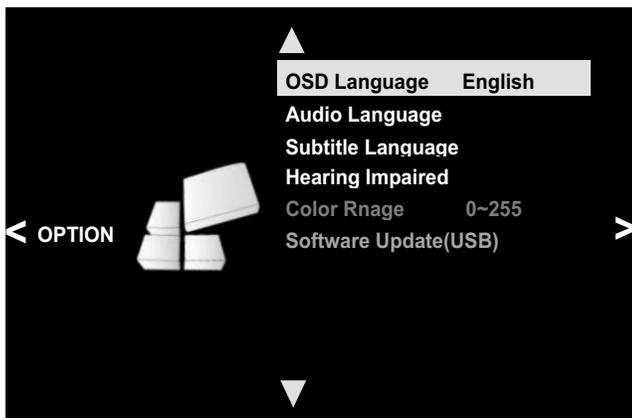

(2) Audio Languages

1. Move to OPTION Menu
2. Use **CHANNEL ▲▼** keys to select "OSD Languages"
3. Push "**CC**" key to enter
4. Use **VOLUME ▲▼** keys to select Primary
5. Push **CHANNEL ▼** key to enter
6. Use **CHANNEL ▲▼** and **VOLUME ▲▼** keys on remote to select 1st language
7. Push "**0**" key to next menu
8. Use **VOLUME ▲▼** key on remote to select Secondary
9. Use **CHANNEL ▲▼** and **VOLUME ▲▼** keys to select 2nd language
10. Push - (Dash)key to exit menu

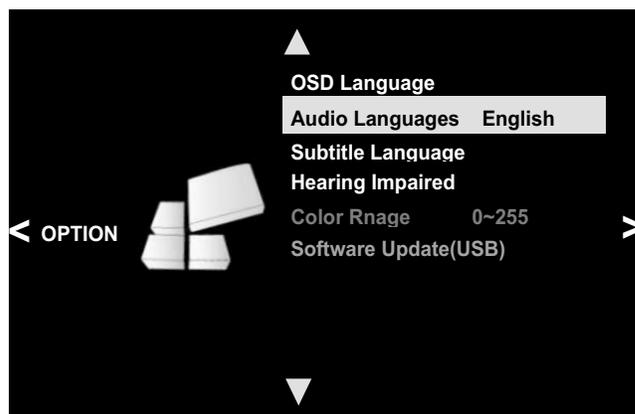


Audio Languages		Primary
Česky	English ▲	Français
◀ Dansk	Español	Hrvatski ▶
Deutsh	Ελληνικά ▼	Italiano
MENU		

Audio Languages		Secondary
Česky	English ▲	Français
◀ Dansk	Español	Hrvatski ▶
Deutsh	Ελληνικά ▼	Italiano
MENU		

(3) Subtitle Language


1. Move to OPTION Menu
2. Use **CHANNEL ▲▼** keys on remote to select "Subtitle Language"
3. Push "**CC**" to enter
4. Use **VOLUME ▲▼** keys on remote to select Primary
5. Push **CHANNEL ▼** key
6. Use **CHANNEL ▲▼** and **VOLUME ▲▼** keys on remote to select 1st language
7. Push "**0**" key to next menu
8. Use **VOLUME ▲▼** keys on remote to select Secondary
9. Use **CHANNEL ▲▼** and **VOLUME ▲▼** keys on remote to select 2nd language
10. Push - (Dash)key to exit menu

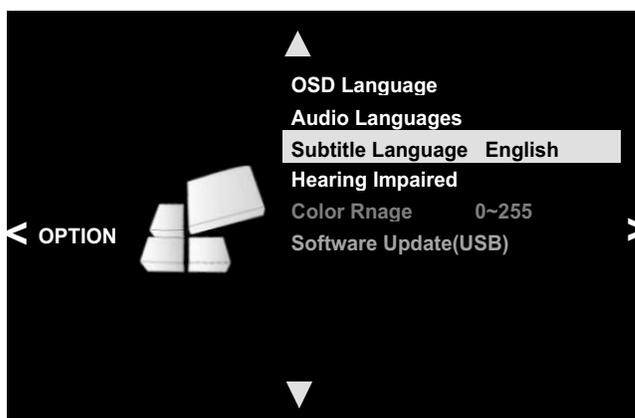



(4) Hearing Impaired

1. Move to OPTION menu
2. Use **CHANNEL ▲ ▼** keys to select “Subtitle Language”
3. Use “**CC**” key on remote to select ON/OFF

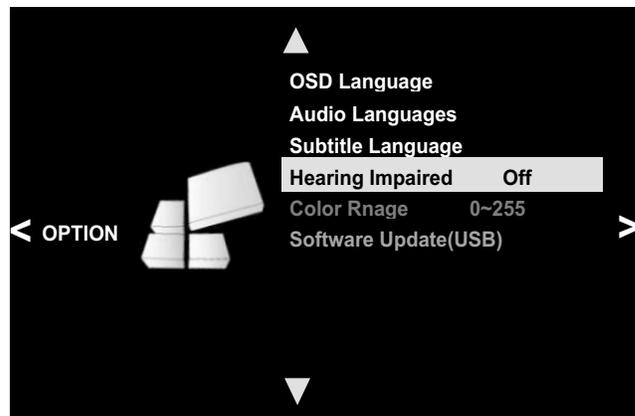

6. CUSTOM FEATURES SETTING

To Enter CUSTOM FEATURE menu.

(Push ‘**CC 0003**’ on the keypad)

CUSTOM FEATURES 7 presets :


- Detect Vibration
- Channel Default Time
- Channel Default
- Auto Default
- Auto Power ON
- Manual CH Setting
- Set Factory Default

(1) Detect Vibration

1. Use **CHANNEL ▲ ▼** keys to select “Detect Vibration”
2. Use **VOLUME ▲ ▼** keys to select Time (Off/ 1min/2min/3min/4min /5min /6min /7min/ 8min)
3. Press the “**0**” key to save and get back to the Custom Feature

(2) Channel Default Time

1. Use **CHANNEL ▲ ▼** keys to select “Channel Default”
2. Use **VOLUME ▲ ▼** keys to select Time (Off/ 10S/ 20S/ 30S/ 40S/ 50S/ 60S)
3. Press the “**0**” key to save and get back to the Custom Feature

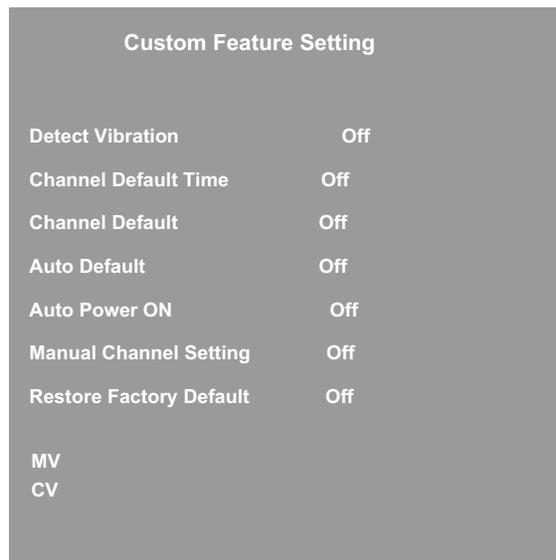

(3) Channel Default

1. Use **CHANNEL ▲ ▼** keys to select “**Channel Default**”
2. Use **VOLUME ▲ ▼** key to select ON/OFF
3. Press the “**0**” key to save and get back to the Custom Feature

(4) Auto Default

1. Use **CHANNEL ▲ ▼** keys to select “**Auto Default**”
2. Use **VOLUME ▲ ▼** keys on remote to select ON/OFF
3. Press the “**0**” key to save and get back to the Custom Feature

(5) Auto Power On

1. Use **CHANNEL ▲ ▼** keys to select “**Auto Power On**”
2. Use **VOLUME ▲ ▼** keys remote to select ON/OFF
3. Press the “**0**” key to save and get back to the Custom Feature

(6) Manual Channel Setting

1. Use **CHANNEL ▲ ▼** keys to select “**Manual Channel Setting**”
2. Push “**CC**” key to enter
3. Use **CHANNEL ▼** key on remote to select CHANNEL
4. Push “**CC**” keys to change setting
(Auto Default / Channel Default / Favorite / Not Viewable/ Viewable)
5. After setting for each channel, Press - (Dash) key to save and exit

Manual Channel Setting			
▲▼	1 BBC ONE	Auto Default	DTV
	2 BBC TWO	Viewable	DTV
	3 BBC NEW 24	Chanel Default	DTV
	4 BBC TEXT	Viewable	DTV
	1 BBC PARLMNT	Viewable	Radio
	1 C-02	Viewable	ATV
	2 C-03	Viewable	ATV
	3 C-04	Viewable	ATV
◀	Delete	▲ MOVE	
○	ENTER		↩ MENU

(7) Restore Factory Default


1. Use **CHANNEL ▲ ▼** key on remote to select “**Restore Factory Default**”
2. Push “**CC**” to begin reset (Power Off)

7. Intellijack - Headphone Jack Replacement



Intellijack Icon

*The IntelliJack self diagnostic headphone circuit detects when the headphone jack has failed or been damaged. When a faulty headphone jack is detected, a BLUE “headphone” icon appears on the keypad (see #4 above). It will remain on until a new jack is installed and the circuit is reset. To reset the faulty headphone jack circuit, insert a known good pair of headphones for 10 seconds.

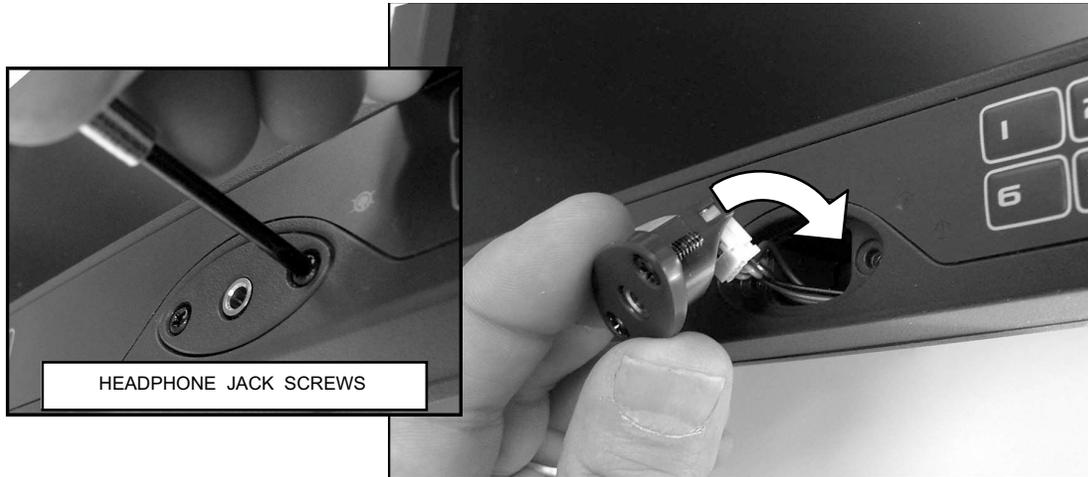

- 1) UNSCREW THE JACK ASSEMBLY SCREWS, ALTERNATING LEFT AND RIGHT IN ORDER TO BACK THE ASSEMBLY OUT.
- 2) REMOVE JACK ASSEMBLY, TIPPING THE FRONT FORWARD SO THE ASSEMBLY WIRES CLEAR THE OPENING.
- 3) UNPLUG THE OLD HEADPHONE JACK AND DISCARD. PLUG IN NEW HEADPHONE JACK TO WIRE HARNESS.
- 4) INSERT NEW HEADPHONE JACK ASSEMBLY, TIPPING IT FORWARD SO ASSEMBLY WIRES CLEAR THE OPENING.
- 5) ALIGN AND SCREW IN THE HEADPHONE JACK ASSEMBLY SCREWS.
- 6) RESET HEADPHONE JACK ICON BY INSERTING A KNOWN-GOOD HEADPHONE PLUG INTO THE JACK FOR 10 SECONDS.

IMPORTANT: Faulty headphones can trigger the headphone jack icon. It is important to test the headphone jack prior to replacement. If the headphone jack is deemed OK , simply reset the faulty headphone jack (STEP 6).

WARRANTY – cont.

THE WARRANTIES PROVIDED HEREIN ARE THE EXCLUSIVE WARRANTIES GIVEN BY MYE ENTERTAINMENT AND SUPERSEDE ANY PRIOR, CONTRARY OR ADDITIONAL REPRESENTATIONS, WHETHER ORAL OR WRITTEN. ANY IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE THAT APPLY TO ANY PARTS DESCRIBED ABOVE ARE LIMITED IN DURATION TO THE PERIODS OF EXPRESS WARRANTIES GIVEN ABOVE FOR THOSE SAME PARTS. MYE HEREBY DISCLAIMS AND EXCLUDES THOSE WARRANTIES THEREAFTER. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. MYE ENTERTAINMENT ALSO HEREBY DISCLAIMS AND EXCLUDES ALL OTHER OBLIGATIONS OR LIABILITIES, EXPRESS OR IMPLIED, ARISING BY LAW OR OTHERWISE, WITH RESPECT TO ANY NONCONFORMANCE OR DEFECT IN ANY PRODUCT, INCLUDING BUT NOT LIMITED TO: (A) ANY OBLIGATION, LIABILITY, RIGHT, CLAIM OR REMEDY IN TORT, WHETHER OR NOT ARISING FROM THE NEGLIGENCE OF MYE OR ITS SUPPLIERS (WHETHER ACTIVE, PASSIVE OR IMPUTED); AND (B) ANY OBLIGATION, LIABILITY, RIGHT, CLAIM OR REMEDY FOR LOSS OF OR DAMAGE TO ANY PRODUCT. THIS DISCLAIMER AND RELEASE SHALL APPLY EVEN IF THE EXPRESSED WARRANTY SET FORTH ABOVE FAILS OF ITS ESSENTIAL PURPOSE.

FOR ANY PRODUCT DESCRIBED ABOVE THAT FAILS TO CONFORM TO ITS WARRANTY, MYE ENTERTAINMENT WILL PROVIDE, AT THEIR OPTION ONE OF THE FOLLOWING: 1) REPAIR OR 2) REPLACEMENT.

MYE AND/OR ITS SUPPLIERS SHALL HAVE NO OBLIGATION OR LIABILITY, WHETHER ARISING IN CONTRACT (INCLUDING WARRANTY), TORT (INCLUDING ACTIVE, PASSIVE, OR IMPUTED NEGLIGENCE AND STRICT LIABILITY), OR OTHERWISE, FOR DAMAGE TO THE PRODUCT, PROPERTY DAMAGE, LOSS OF USE, REVENUE OR PROFIT, COST OF CAPITAL, COST OF SUBSTITUTE PRODUCT, ADDITIONAL COSTS INCURRED BY BUYER (BY WAY OF CORRECTION OR OTHERWISE) OR ANY OTHER INCIDENTAL, SPECIAL, INDIRECT, OR CONSEQUENTIAL PRODUCT. THIS EXCLUSION APPLIES EVEN IF THE ABOVE WARRANTY FAILS OF ITS ESSENTIAL PURPOSES AND REGARDLESS OF WHETHER SUCH DAMAGES ARE SOUGHT FOR BREACH OF WARRANTY, BREACH OF CONTRACT, NEGLIGENCE OR STRICT LIABILITY IN TORT OR UNDER ANY OTHER LEGAL THEORY.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.



MYE INC
28460 Westinghouse Place
Valencia, Ca. 91335
www.myeclubtv.com

MYE. INC ALL Rights Reserved 2012